

Measuring for Blinds Inside the Jamb

1


Be sure to measure accurately – If your window is set within a jamb 70mm or deeper, fitting the blind inside fit makes for a neat finish; Avoid mistakes by taking your time and measuring accurately; Measure tight, wood to wood, and don't make your own deductions as the factory does this



2

Measure for width – Measure the width of the jamb in three places: at the top, in the middle, and at the bottom; Make sure you hold both ends of the tape measure on the **inside** edges of the jamb; Note the **smallest** width in **millimetres**; this will be the measurement to use



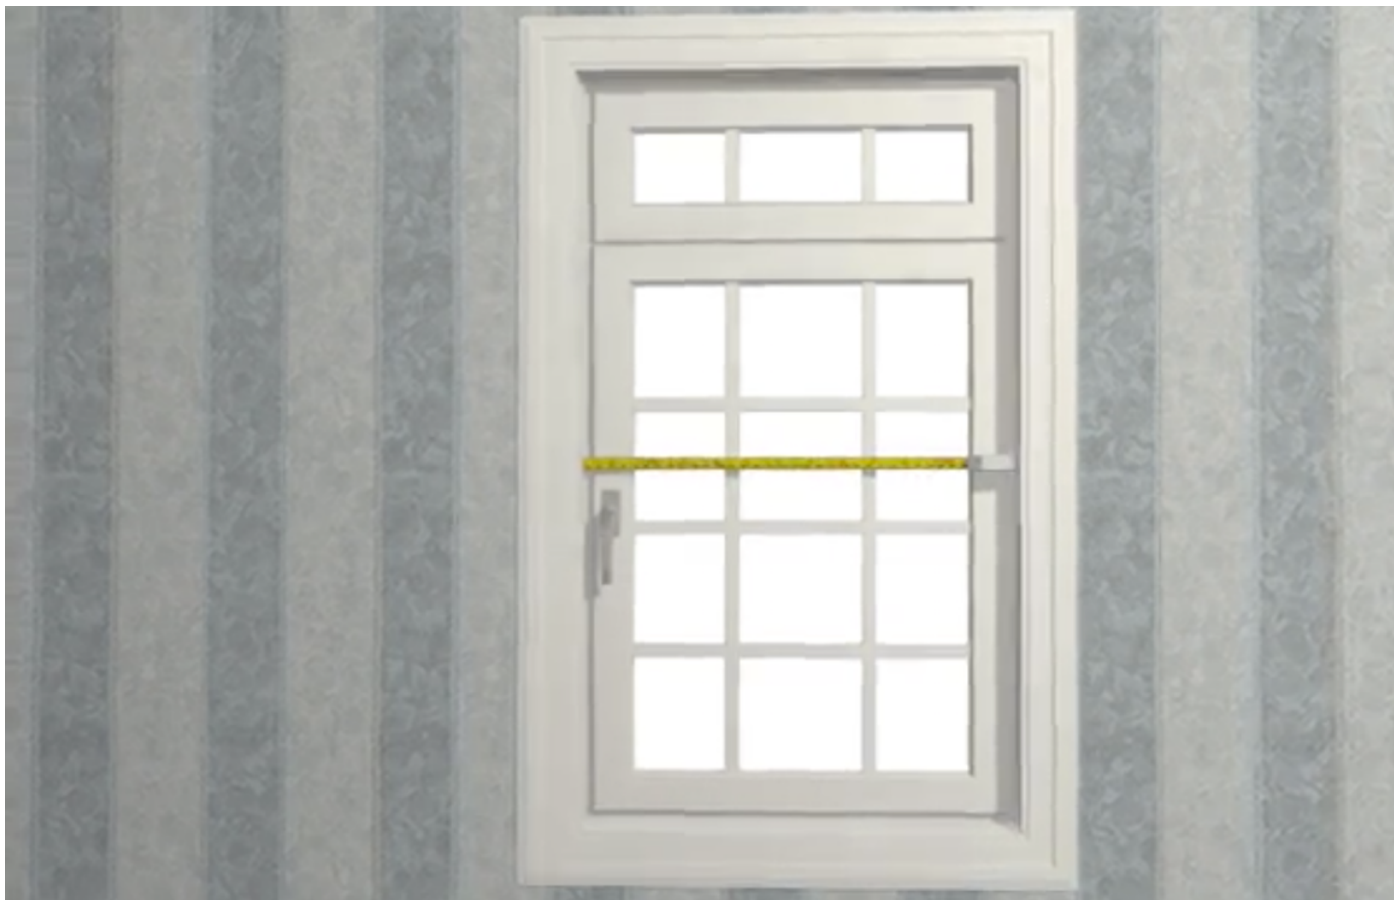

3

Measure for height – Measure the drop of the window jamb in three places: at the left, in the centre, and at the right; Make sure you hold both ends of the tape measure on the **inside** edges of the jamb; Note the **shortest** drop in **millimetres**; this will be the measurement to use





4

Supply measurements as WIDTH X DROP; Use millimetres (mm) for best accuracy; provide what window side you'd like the controls on: either L (LEFT) or R (RIGHT)

EG: 678 X 1305 R

